

**PRO-920/1120HD IR CODES**

| <b>CATEGORY</b> | <b>FUNCTION</b> | <b>COMMAND 1</b> | <b>COMMAND 2</b> |
|-----------------|-----------------|------------------|------------------|
| POWER           | STANDBY/ON      | AA 1C            |                  |
|                 | ON              | AA 1A            |                  |
|                 | OFF             | AA 1B            |                  |
|                 | SLEEP           | AA 48            |                  |
| VOLUME          | VOLUME UP       | AA 0A            |                  |
|                 | VOLUME DOWN     | AA 0B            |                  |
|                 | MUTE            | AA 49            |                  |
| INPUT           | INPUT TOGGLE    | AA 13            |                  |
|                 | INPUT 1         | AA 0F            |                  |
|                 | INPUT 2         | AA 0E            |                  |
|                 | INPUT 3         | AA 56            |                  |
|                 | INPUT 4         | AA DE            |                  |
|                 | PC              | AA D3            | AF 33            |
|                 | DTV (ATSC)      | AA D3            | AF 7E            |
|                 | ANTENNA         | AA 45            |                  |
| TUNER           | i.LINK          | AA D5            | AF 60            |
|                 | 1               | AA 01            |                  |
|                 | 2               | AA 02            |                  |
|                 | 3               | AA 03            |                  |
|                 | 4               | AA 04            |                  |
|                 | 5               | AA 05            |                  |
|                 | 6               | AA 06            |                  |
|                 | 7               | AA 07            |                  |
|                 | 8               | AA 08            |                  |
|                 | 9               | AA 09            |                  |
|                 | 0               | AA 00            |                  |
|                 | PERIOD (.)      | AA C3            |                  |
|                 | CHANNEL UP      | AA 10            |                  |
|                 | CHANNEL DOWN    | AA 11            |                  |
|                 | CHANNEL ENTER   | AA 1F            |                  |
|                 | CHANNEL RETURN  | AA 5C            |                  |
|                 | DTV INFO        | AA D3            | AF DB            |
|                 | DTV GUIDE       | AA D4            | AF 61            |
|                 | FAVORITE A      | AA D4            | AF 74            |
|                 | FAVORITE B      | AA D4            | AF 71            |
|                 | FAVORITE C      | AA D4            | AF 72            |
|                 | FAVORITE D      | AA D4            | AF 73            |
|                 | MTS             | AA 1E            |                  |
| SETUP           | MENU            | AA 8B            |                  |
|                 | RETURN          | AA D3            | AF 74            |
|                 | UP ARROW        | AA 96            |                  |
|                 | DOWN ARROW      | AA 97            |                  |
|                 | RIGHT ARROW     | AA 94            |                  |
|                 | LEFT ARROW      | AA 95            |                  |
|                 | SET/ENTER       | AA 8A            |                  |
|                 | SCREEN SIZE     | AA D3            | AF 3C            |
|                 | DISPLAY         | AA 4A            |                  |
| PIP             | A/V SELECT      | AA 59            |                  |
|                 | SPLIT           | AA D5            | AF 20            |
|                 | FREEZE          | AA 18            |                  |