

PDP-4330/5030HD IR CODES

CATEGORY	FUNCTION	COMMAND 1	COMMAND 2
POWER	STANDBY/ON	AA 1C	
	ON	AA 1A	
	OFF	AA 1B	
	SLEEP	AA 48	
VOLUME	VOLUME UP	AA 0A	
	VOLUME DOWN	AA 0B	
	MUTE	AA 49	
INPUT	INPUT TOGGLE	AA 13	
	INPUT 1	AA 0F	
	INPUT 2	AA 0E	
	INPUT 3	AA 56	
	INPUT 4	AA DE	
	PC	AA D3	AF 33
TUNER	ANTENNA	AA 45	
	1	AA 01	
	2	AA 02	
	3	AA 03	
	4	AA 04	
	5	AA 05	
	6	AA 06	
	7	AA 07	
	8	AA 08	
	9	AA 09	
	0	AA 00	
	PERIOD (.)	AA C3	
	CHANNEL UP	AA 10	
	CHANNEL DOWN	AA 11	
	CHANNEL ENTER	AA 1F	
	CHANNEL RETURN	AA 5C	
	DTV INFO	AA D4	AF 60
	DTV GUIDE	AA D4	AF 61
	DTV MENU	AA D3	AF 71
	FAVORITE A	AA 74	
	FAVORITE B	AA 72	
	FAVORITE C	AA 71	
	FAVORITE D	AA 73	
	MTS	AA 1E	
CC	AA D3	AF 38	
SETUP	MENU	AA 8B	
	RETURN	AA D3	AF 74
	UP ARROW	AA 96	
	DOWN ARROW	AA 97	
	RIGHT ARROW	AA 94	
	LEFT ARROW	AA 95	
	SET/ENTER	AA 8A	
	SCREEN SIZE	AA D3	AF 3C
	A/V SELECT	AA 59	
	FRONT SURROUND	AA 1D	
	DISPLAY	AA 4A	
PIP	SPLIT	AA 14	
	FREEZE	AA D3	AF 3D
	SUB SELECT	AA D3	AF 73
	SUB INPUT	AA 57	
	SUB CH UP	AA D3	AF 30
	SUB CH DOWN	AA D3	AF 31