





CATEGORY	FUNCTION	COMMAND	
POWER	POWER ON/OFF	AA1C	
	POWER ON	AA1A	
	POWER OFF	AA1B	
	SLEEP	AA5E+AF70	
VOLUME	VOLUME +	AA0A	
	VOLUME -	AA0B	
	MUTING	AA49	
INPUT	INPUT TOGGLE (?)	AA13	
	INPUT 1	AA5A+AF7A	
	INPUT 2	AA5A+AF7B	
	INPUT 3	AA5A+AF7C	
	INPUT 4	AA5A+AF7D	
	INPUT 5	AA5A+AF7E	
	INPUT 6	AA5A+AF7F	
	INPUT 7	AA5A+AF77	
	INPUT PC	AA5A+AF74	
	HOME MEDIA GALLERY	AA5B+AF35	
	ANTENNA	AA45	
	ANTENNA A/B CYCLE	AA0C	
TUNER	1	AA01	
	2	AA02	
	3	AA03	
	4	AA04	
	5	AA05	
	6	AA06	
	7	AA07	
	8	AA08	
	9	AA09	
	0	AA00	
	.(DOT)	AA5A+AF64	
	CH+	AA10	
	CH-	AA11	
	CH ENTER	AA5A+AF61	
	CH RETURN	AA5A+AF62	
	 BLUE/FAVORITE A	AA5B+AF2F	
	 RED/FAVORITE B	AA5B+AF2C	
	 GREEN/FAVORITE C	AA5B+AF2D	
	 YELLOW/FAVORITE D	AA5B+AF2E	
	TV GUIDE	AA5B+AF24	
	Day +	AA5B+AF2A	
	Day -	AA5B+AF2B	
	PAGE +	AA5B+AF33	
	PAGE -	AA5B+AF34	
	TV GUIDE INFO	AA5B+AF25	
	TV GUIDE MENU	AA5B+AF27	
	MTS	AA1E	
SETUP	DISPLAY	AA4A	
	SCREEN SIZE	AA5E+AF3A	
	AV SELECTION	AA5E+AF61	
	HOME MENU / MENU	AA5B+AF20	
	RETURN	AA5B+AF22	
	CURSOR RIGHT	AA24	
	CURSOR LEFT	AA25	
	CURSOR UP	AA26	
	CURSOR DOWN	AA27	
	ENTER	AA28	
	HDMI CONTROL (CEC)	AA5B+AF36	
	PIP	FREEZE	AA5E+AF24
		SPLIT	AA5E+AF20
SWAP		AA5E+AF25	
SHIFT		AA5E+AF27	
HOME MEDIA GALLERY CONTROL	STOP	AA30	
	PLAY	AA32	
	PAUSE	AA33	
	FAST FORWARD	AA34	
	REWIND	AA35	