


(Front)

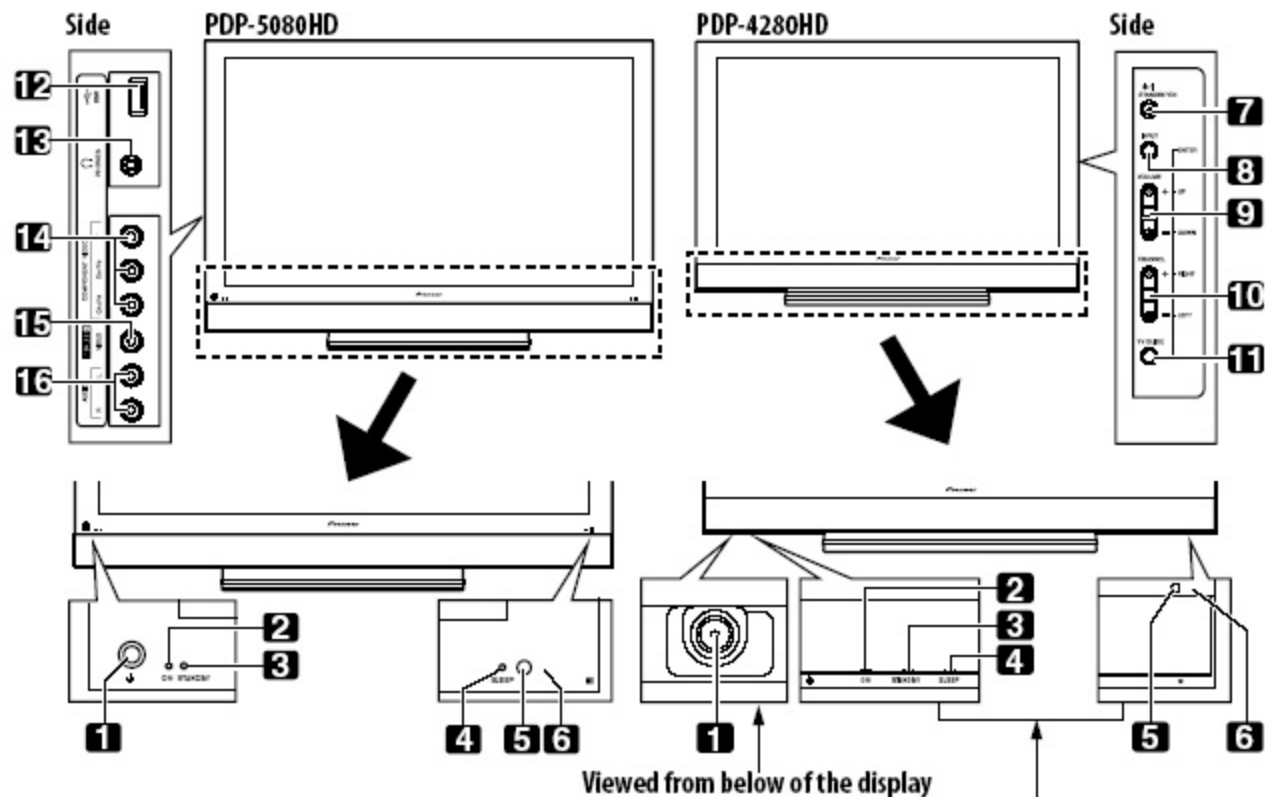

Viewed from below of the display

Viewed from the front side of the display


The terminals on side panels are common to the PDP-5080HD and PDP-4280HD.

- 1 button  
(See page 27.)
- 2 POWER ON indicator  
(See page 27.)
- 3 STANDBY indicator  
(See page 27.)
- 4 SLEEP indicator
- 5 Room Light Sensor
- 6 Remote control sensor
- 7 **STANDBY/ON** button
- 8 **INPUT** button (**ENTER** button\*)
- 9 **VOLUME UP/DOWN** buttons (**UP/DOWN** buttons\*)
- 10 **CHANNEL UP/DOWN** buttons (**LEFT/RIGHT** buttons\*)
- 11 **TV GUIDE** button\*
- 12 USB port
- 13 PHONES output terminal
- 14 INPUT 3 terminals (COMPONENT VIDEO: Y, Pb, Pr)
- 15 INPUT 3 terminal (VIDEO)
- 16 INPUT 3 terminals (AUDIO)





The buttons with asterisks (\*) can operate the TV Guide On Screen™ system.

(Rear)


PDP-5080HD

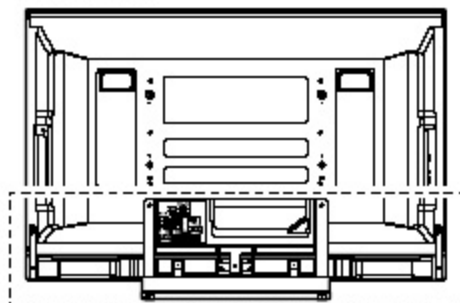

PDP-4280HD

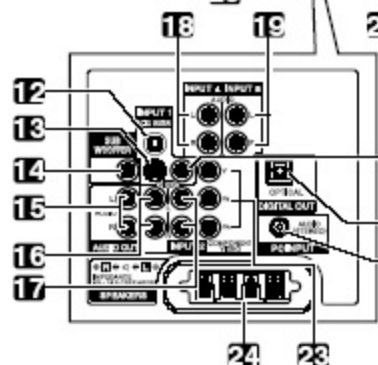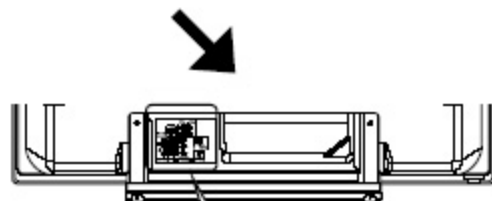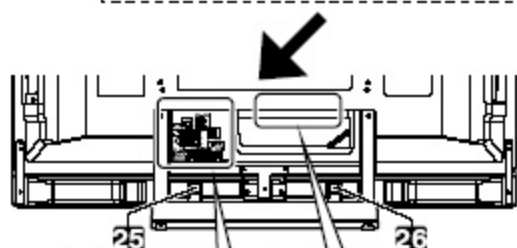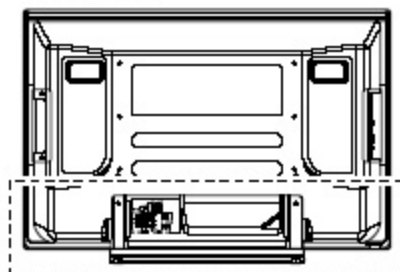

\*For exact terminal positions, refer to the terminal position sheet located near the terminal compartment.

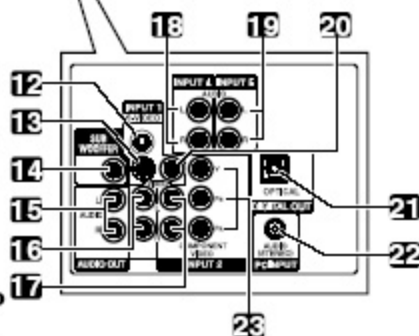

- 1 CableCARD™ slot
- 2 ANT/CABLE A IN terminal
- 3 AC IN terminal
- 4 INPUT 4 terminal (HDMI)
- 5 INPUT 5 terminal (HDMI)
- 6 INPUT 6 terminal (HDMI)
- 7 INPUT 7 terminal (HDMI)
- 8 PC INPUT terminal (ANALOG RGB)
- 9 CONTROL OUT terminal
- 10 RS-232C terminal (used for factory setup)
- 11 ANT B IN terminal
- 12 INPUT 1 terminal (S-VIDEO)
- 13 INPUT 1 terminal (VIDEO)
- 14 SUB WOOFER terminal

The terminals from 1 to 8 are the same as the PDP-5080HD.

- 15 AUDIO OUT terminals (AUDIO)
- 16 INPUT 1 terminals (AUDIO)
- 17 INPUT 2 terminals (AUDIO)
- 18 INPUT 4 terminals (AUDIO)
- 19 INPUT 5 terminals (AUDIO)
- 20 INPUT 2 terminal (VIDEO)
- 21 DIGITAL OUT terminal (OPTICAL)
- 22 PC INPUT terminal (AUDIO)
- 23 INPUT 2 terminals (COMPONENT VIDEO: Y, Pb, Pr)
- 24 SPEAKERS (R/L) terminals
- 25 SPEAKERS (R) terminal (Speaker side)
- 26 SPEAKERS (L) terminal (Speaker side)