





<b>CATEGORY</b>	<b>FUNCTION</b>	<b>COMMAND</b>	
POWER	POWER ON/OFF	AA1C	
	POWER ON	AA1A	
	POWER OFF	AA1B	
	SLEEP	AA5E+AF70	
VOLUME	VOLUME +	AA0A	
	VOLUME -	AA0B	
	MUTING	AA49	
INPUT	INPUT TOGGLE (?)	AA13	
	INPUT 1	AA5A+AF7A	
	INPUT 2	AA5A+AF7B	
	INPUT 3	AA5A+AF7C	
	INPUT 4	AA5A+AF7D	
	INPUT 5	AA5A+AF7E	
	INPUT 6	AA5A+AF7F	
	INPUT 7	AA5A+AF77	
	INPUT PC	AA5A+AF74	
	ANTENNA	AA45	
	ANTENNA A/B CYCLE	AA0C	
	TUNER	1	AA01
		2	AA02
3		AA03	
4		AA04	
5		AA05	
6		AA06	
7		AA07	
8		AA08	
9		AA09	
0		AA00	
.(DOT)		AA5A+AF64	
CH+		AA10	
CH-		AA11	
CH ENTER		AA5A+AF61	
CH RETURN		AA5A+AF62	
 BLUE/FAVORITE A		AA5B+AF2F	
 RED/FAVORITE B		AA5B+AF2C	
 GREEN/FAVORITE C		AA5B+AF2D	
 YELLOW/FAVORITE D		AA5B+AF2E	
TV GUIDE		AA5B+AF24	
Day +		AA5B+AF2A	
Day -		AA5B+AF2B	
PAGE +		AA5B+AF33	
PAGE -		AA5B+AF34	
TV GUIDE INFO		AA5B+AF25	
TV GUIDE MENU		AA5B+AF27	
MTS		AA1E	
SETUP		DISPLAY	AA4A
		SCREEN SIZE	AA5E+AF3A
		AV SELECTION	AA5E+AF61
	HOME MENU / MENU	AA5B+AF20	
	RETURN	AA5B+AF22	
	CURSOR RIGHT	AA24	
	CURSOR LEFT	AA25	
	CURSOR UP	AA26	
	CURSOR DOWN	AA27	
	ENTER	AA28	
	HDMI CONTROL (CEC)	AA5B+AF36	
	PIP	FREEZE	AA5E+AF24
		SPLIT	AA5E+AF20
SWAP		AA5E+AF25	
SHIFT		AA5E+AF27	