

Pioneer AVIC –Z140BH and AVIC X940BT firmware update (v4.600) for iPhone with Lightning connector compatible with AppRadio Mode

Update instructions for navigation models: **AVIC-Z140BH and AVIC-X940BT**

Download firmware update files

here: <http://www.pioneerelectronics.com/PUSA/Support/Downloads>

REMARKS

- ✓ This firmware update is necessary only if you own an iPhone with Lightning connector and if you want to enjoy AppRadio Mode, music and/or video playback from your iPhone with Lightning connector. (For details on function limitations caused by this firmware update, refer to **IMPORTANT** on following page.)
- ✓ **This firmware update applies only to AVIC-Z140BH or AVIC-X940BT sold in the United States and Canada, and where the software has never been upgraded.** Installing the update on other products could seriously damage the products.
- ✓ If you apply any software upgrade to your navigation system after this firmware update, you need to apply a separate firmware update that is specifically intended for the software upgrade installed onto your navigation system.
- ✓ In this manual, iPhone 5 and iPod touch (5th generation) will be referred to as “iPhone with Lightning connector”.

Functions enabled by firmware update

Updating the firmware of your navigation system results in the following changes:

- Additional functions and settings related to using an iPhone with Lightning connector will be available.
- “iPod Settings” is added to the “AV System Settings” menu.
- Setting values of “App Connection” change from “Wired” to “iPhone”, and from “Bluetooth” to “Others”, respectively.
- “Connect” gets added to the “Pandora®” or “aha” screen to connect your registered iPhone with Lightning connector via Bluetooth.
- Guidelines are added to the rear view image.

IMPORTANT

- The following cables are required for connection to your navigation system to utilize an iPhone with Lightning connector for AppRadio Mode. However, Bluetooth audio streaming is not available when using these cables and while “iPod Connection Settings” is set to “VGA”.
 - VGA/USB interface cable for iPod / iPhone (CD-IV202NAVI, sold separately)
 - Lightning to VGA Adapter (Apple Inc. product, sold separately)
 - Lightning to USB cable (CD-IU52, sold separately)

Functions that use GPS positioning are not available in AppRadio Mode or Aha Radio while an iPod touch is connected using this method.

- When you using the VGA/USB interface cable for iPod / iPhone (CD-IV202NAVI, sold separately) and “iPod” is selected as a rear display source, there may be no audio output available through the rear display output when the SD or USB source is selected on the navigation unit. For details, refer to *Notice regarding output setting of the rear display* on page 13.
- If you want to play music and/or video files stored on your iPhone with Lightning connector, first install CarMediaPlayer app on your iPhone with Lightning connector, then launch CarMediaPlayer while in AppRadio Mode from your navigation system. You cannot play music and/or video files stored directly from your iPhone with Lightning connector using the VGA/USB interface cable for iPod / iPhone without using the CarMediaPlayer app.
 - CarMediaPlayer is available as a free download from the App Store.
 - AppRadio Mode was previously known as Advanced App Mode.
- If you connect your iPhone with Lightning connector to your navigation system using a USB interface cable for iPod (CD-IU51V, sold separately) and a Lightning to 30-pin Adapter (Apple Inc. product, sold separately), you will have access to your music files, Pandora® and Aha Radio on your iPhone with Lightning connector. AppRadio Mode is not supported when the iPhone with Lightning connector is connected with this method.

Copyright

The names of private corporations, products and other entities described in this product are the registered trademarks or trademarks of their respective firms. For more information, refer to the Operation Manual of your navigation system.

Updating the firmware must be undertaken in the following order.

- A. Downloading firmware update files**
- B. Updating firmware on your navigation system**
- C. Updating the Bluetooth® wireless technology software**
- D. Verifying system application version**
- E. Connecting your iPhone with your navigation system**

A. Downloading firmware update files

IMPORTANT

Please download and print these firmware update instructions before downloading and installing the firmware update. It is very important that you complete all steps correctly and in the order described below.

Procedure

1. Download only the single file that corresponds with your model from the website to your computer. <http://www.pioneerelectronics.com/PUSA/Support/Downloads>

— For AVIC-Z140BH, the file name is “AVIC-Z140BH_FW-Update_v4.600.zip”.

— For AVIC-X940BT, the file name is “AVIC-X940BT_FW-Update_v4.600.zip”.

2. Locate the file on your hard drive and decompress it.

The downloaded file produces the following folder and file when decompressed.

— “AVICZ110”


— “TESTMODE.KEY”

— “FIRMWARE”

Note: *Although the folder is named “AVICZ110”, it does contain the correct firmware files for AVIC-Z140BH or AVIC-X940BT. Do not rename the folder or attempt to install these files on anything other than AVIC-Z140BH or AVIC-X940BT.*

B. Updating firmware on your navigation system

IMPORTANT

- DO NOT perform any steps of this firmware update if the model number is anything other than AVIC-Z140BH or AVIC-X940BT. Check your model number before updating firmware.
 - For AVIC-Z140BH, the model number is located to the left of the VOL (+/–) button.
 - For AVIC-X940BT, the model number is located just below the  button.
- SD memory card or microSD card requirements:
 - For AVIC-Z140BH, SD memory card 250 MB or more in capacity
 - For AVIC-X940BT, microSD card 250 MB or more in capacity
 - Should be blank and formatted in “FAT32” (SD memory card or microSD card should not contain any files).
 - Write-protect switch should be in the unlocked position.
- While your navigation system is being updated, DO NOT turn off the system’s power. Failure to follow this warning may result in serious damage to your navigation system.
- DO NOT eject SD memory card or microSD card during firmware update process.
- Performing firmware update restores all settings to their default values.
- Disconnect any mobile devices currently connected to your navigation system before you perform the firmware update.

Procedure

1. **Connect a SD memory card or microSD card to your computer, and then locate and copy the “AVICZ110” and “TESTMODE.KEY” onto the SD memory card or microSD card.**


Ensure update folder and file are located within the root (top) folder of your SD memory card or microSD card. There should be no other files on the SD memory card or microSD card.


2. **Turn your vehicle’s key to ON position and power up your navigation system.**
3. **Press the MODE button to display the “AV source” screen, and then tap [Off] on the left edge of the screen.**

The AV source turns off.

4. **Insert the SD memory card or microSD card into your navigation system.**


The system automatically recognizes the firmware update file, reboots, and starts update process within a minute.

— For AVIC-Z140BH, you can press the  button to close the LCD panel while you are updating the firmware.

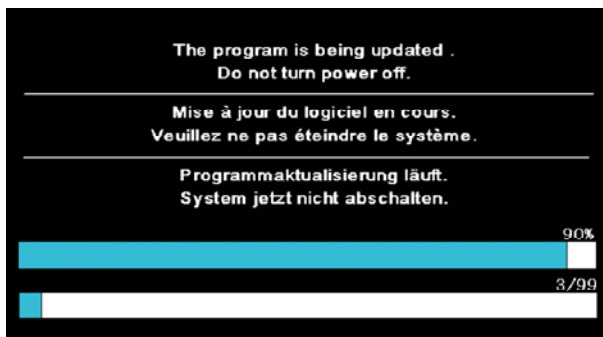

5. Wait until the update process is complete.


The update process takes approximately two to three minutes to complete. Once the firmware update process is complete, your navigation system displays the “Program forced write [System uCom Write]” screen.

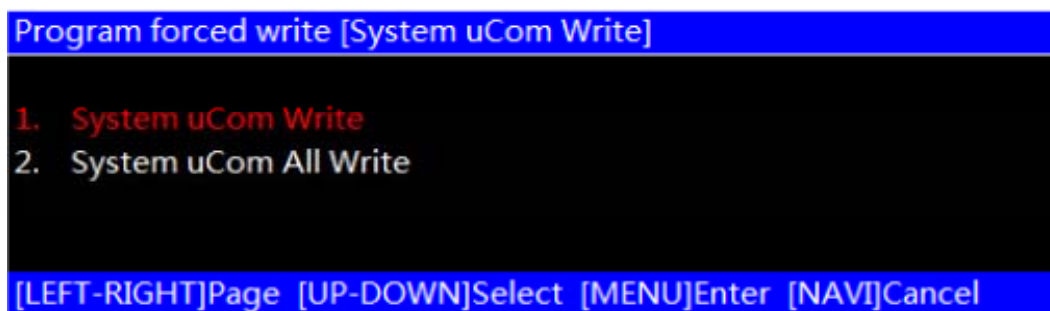

— The default setting is “System uCom Write”.


6. Select “System uCom Write” with the VOL (+/–) button, and then press the MODE button.

The following screen appears.

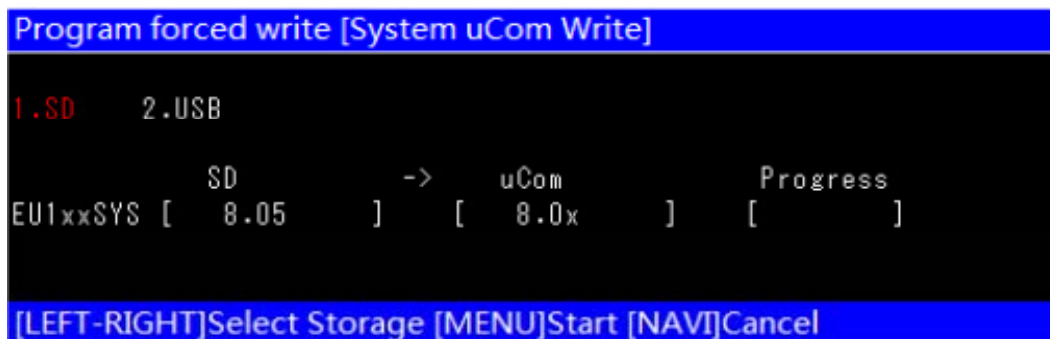

— For AVIC-X940BT, the Multi-control knob is used instead of the VOL (+/–) button.

7. Confirm (1) the SD version is “8.05” and (2) the uCom version is “8.04” or earlier.

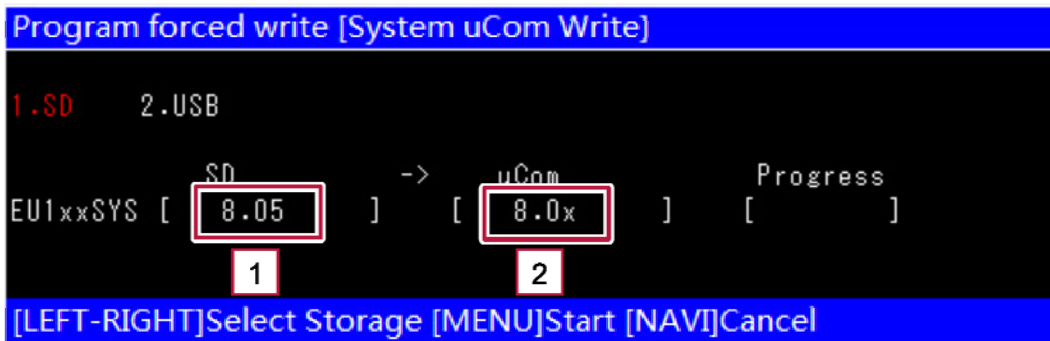

— If the SD version is displayed as “- - - - -”, the data on the SD memory card or microSD card may be corrupted. Please repeat the firmware download and installation process.


8. If the SD version is correct and the uCom version is “8.04” or earlier, press the **MODE** button on your navigation system to begin the uCom update.

WARNING! Do not turn off power or eject the SD memory card or microSD card while the update is in progress. Failure to follow this warning may result in serious damage to your navigation system.

9. Wait until the update process is complete.


The update process takes approximately six minutes to complete. Once the uCom update is complete, your navigation system automatically reboots and the “Program forced write [System uCom Write]” screen appears again.

10. Select “System uCom Write” with the VOL (+/–) button, and then press the **MODE** button. The following screen appears.

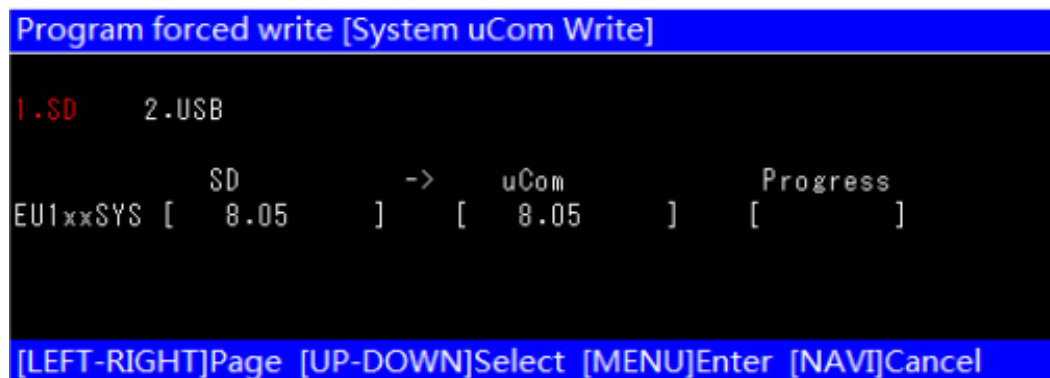

— For AVIC-X940BT, the Multi-control knob is used instead of the VOL (+/–) button.

11. Confirm the uCom version is “8.05”.

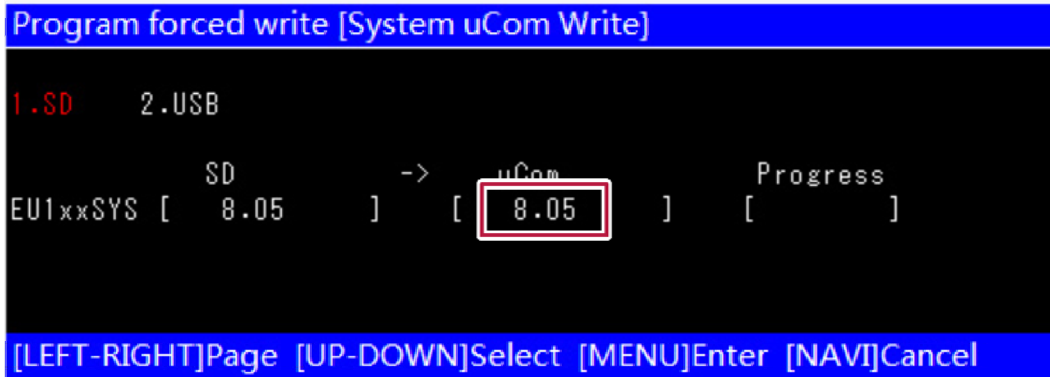

12. Eject the SD memory card or microSD card on the “Program forced write [System uCom Write]” screen and turn the vehicle’s key to OFF position to power off your navigation system.

The firmware update is now complete.

C. Updating the Bluetooth wireless technology software

CAUTION

- Be careful to follow the update procedure correctly. If you make a mistake, Bluetooth wireless technology functions will become unavailable.
 - Consult your authorized dealer if you are unable to use Bluetooth wireless technology functions.
- Be sure to complete the Bluetooth firmware update procedure without interruption.

Procedure

1. Connect the SD memory card or microSD card to your computer, and then delete “AVICZ110” and “TESTMODE.KEY” from the SD memory card or microSD card.

2. Locate and copy “FIRMWARE” onto the SD memory card or microSD card.

Ensure update folder and file are located within the root (top) folder of your SD memory card or microSD card. There should be no other files on the SD memory card or microSD card.

3. Turn your vehicle’s key to ON position and power up your navigation system.

4. Insert the SD memory card or microSD card into your navigation system.

5. Press the HOME button to display the “Top Menu” screen.

6. Touch [Settings].

The “Settings Menu” screen appears.

7. Touch [Bluetooth Settings].

The “Bluetooth Settings” screen appears.

8. Touch [Firmware update].

The current version is displayed.

9. Confirm the Bluetooth firmware version.


Make sure that the current version is 3.22 or later.



10. If the current version is 3.22 or later, touch [Firmware update].

The message confirming whether or not to start the update will appear.

- 11. Make sure that the current Bluetooth firmware version is 3.22 or later and the new Bluetooth firmware version is 3.32.**

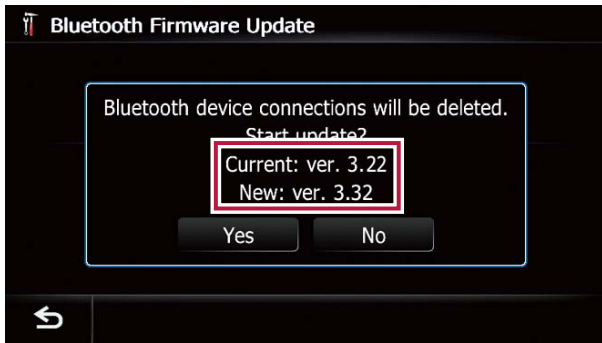

- 12. Touch [Yes].**

Update starts.

- 13. Wait until the update process is complete.**

A message will appear after the update is complete.

- 14. Touch [OK].**

The message disappears, and the map screen returns.


- 15. Eject the SD memory card or microSD card from your navigation system.**

Update is completed.

D. Verifying system application version

Procedure

1. Press the HOME button to display the “Top Menu” screen.

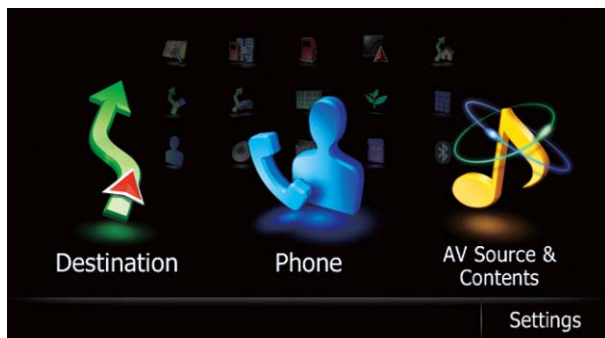

- ## 2. Touch [Settings].

The “Settings Menu” screen appears.


- ### 3. Touch [System Settings].

The “System Settings” screen appears.

- #### 4. Touch [Service Information].


The “Service Information Screen” appears.

- 5. Touch and hold the upper left corner of the screen.**

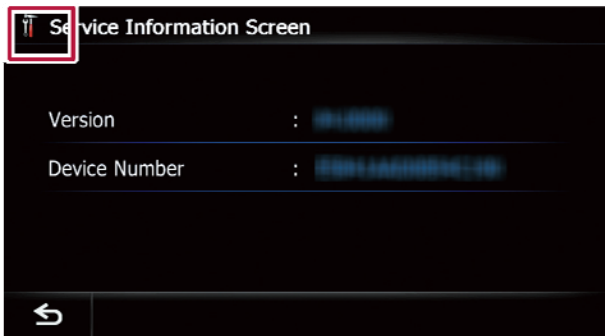

The current firmware version appears.


- 6. Confirm the application version is “4.600”.**

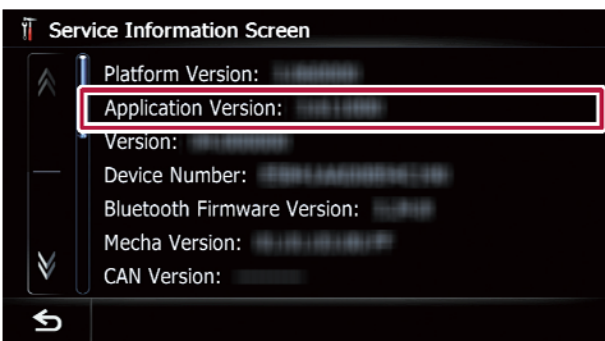


7. Touch

E. Connecting your iPhone with your navigation system

Connecting an iPhone with Lightning connector

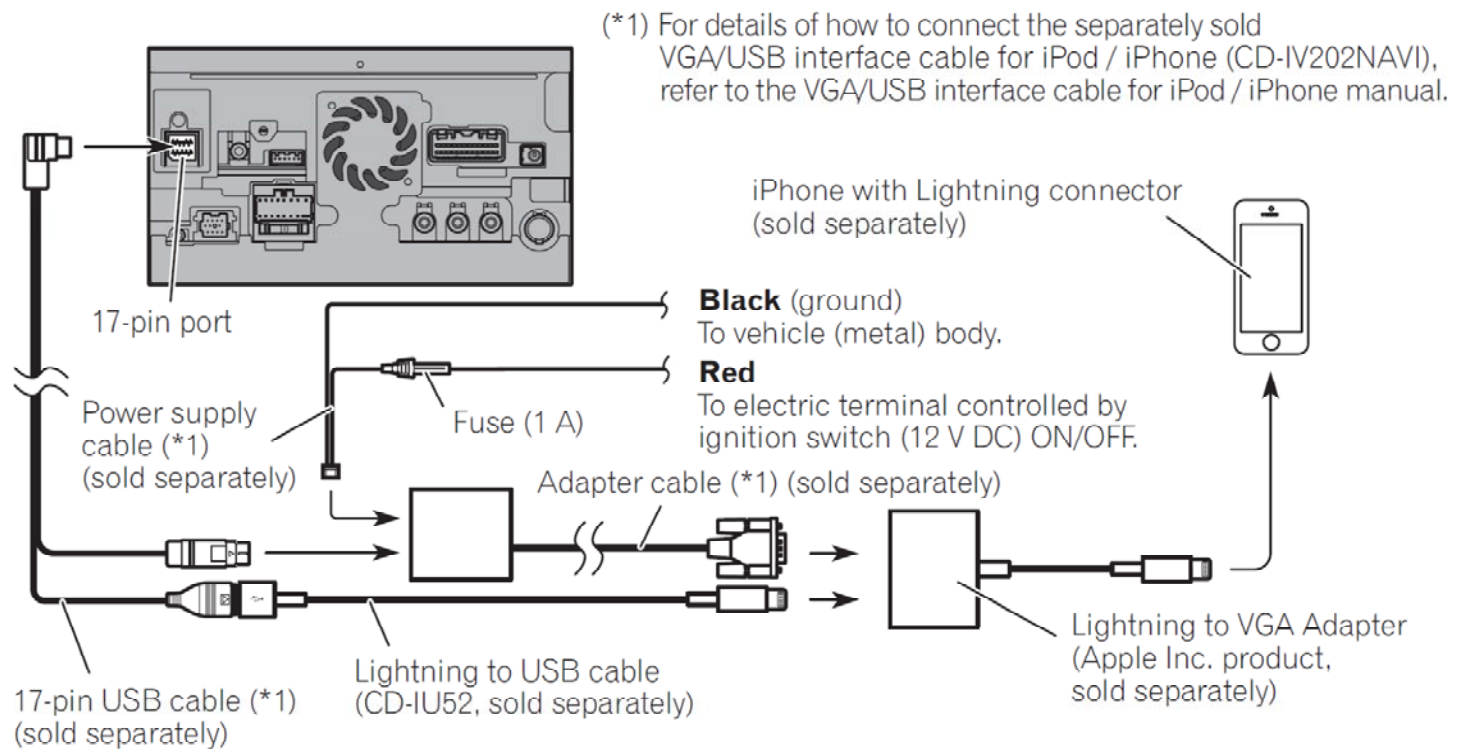

Connecting an iPhone with a Lightning to 30-pin Adapter

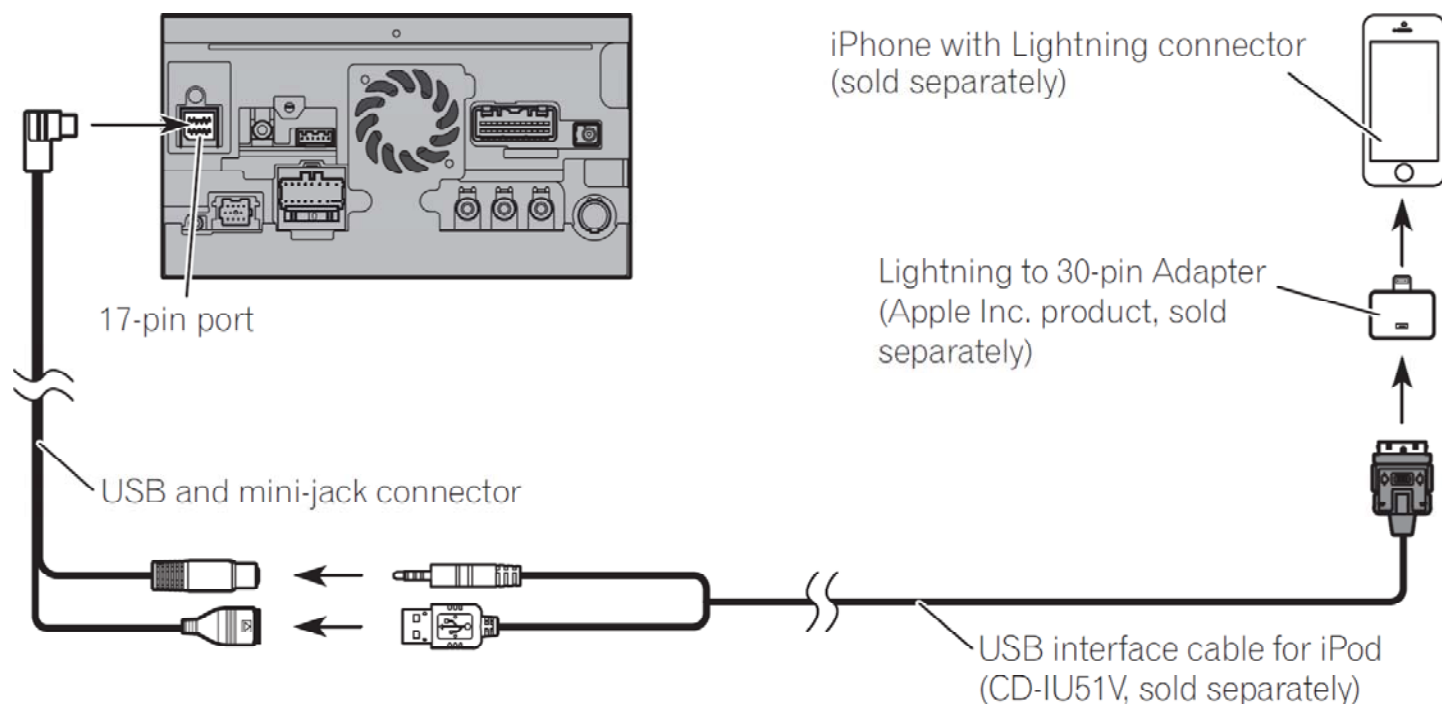

Setting for iPod source, Pandora® and Aha Radio

The following settings are required for iPod source, Pandora® and Aha Radio.

Device Name	App Connection	iPod Connection Settings
iPhone with Lightning connector (Both music and video files are playable in AppRadio Mode.)	iPhone	VGA
iPhone with a Lightning to 30-pin Adapter (Only music files are playable.)	iPhone	30-pin
iPod device with 30-pin connector	iPhone	30-pin
Smartphone	Others	—
Notes: <ul style="list-style-type: none">• In this section, iPhone, iPod touch, iPod classic, and iPod nano will be referred to as “iPod device”.• The default setting of “App Connection” is “iPhone”.• The default setting of “iPod Connection Settings” is “30-pin”.		

Setting App Connection

1. Disconnect an iPod device or a USB storage device.

“App Connection” is only active when an iPod device or a USB storage device is disconnected.

2. Press the MODE button to display the “AV source” screen, and then tap [Off] on the left edge of the screen.

The AV source turns off.

3. Press the HOME button to display the “Top Menu” screen.

4. Touch [Settings].

The “Settings Menu” screen appears.

5. Touch [AV Settings].

The “AV System Settings” menu appears.

6. Set “App Connection” to “iPhone” or “Others”.

Each time you touch [App Connection] switches the setting between “iPhone” and “Others”.

Setting iPod Settings

1. Disconnect an iPod device or a USB storage device.

“iPod Settings” is only active when an iPod device or a USB storage device is disconnected.

2. Press the MODE button to display the “AV source” screen, and then tap [Off] on the left edge of the screen.

The AV source turns off.

3. Press the HOME button to display the “Top Menu” screen.

4. Touch [Settings].

The “Settings Menu” screen appears.

5. Touch [AV Settings].

The “AV System Settings” menu appears.

6. Touch [iPod Settings] and then select “30-pin” or “VGA”.

Using AppRadio Mode (for users connecting an iPhone with Lightning connector via the CD-IV202NAVI)

AppRadio Mode is previously referred to as Advanced App Mode. Even though the function name has been changed from “Advanced App Mode” to “AppRadio Mode”, “Advanced App Mode” will still be displayed on the screen of your navigation system.

1. Register your iPhone with Lightning connector and connect it to your navigation system via Bluetooth wireless technology.

If you have previously paired your iPhone with Lightning connector to your navigation system, you will have to re-register and connect your device after the firmware update is complete. Please refer to the Operation Manual of your navigation system for details on *Registering and connecting a Bluetooth device*.

2. Unlock and connect your iPhone with Lightning connector.

3. Press the MODE button to display the “AV source” screen, and then tap [iPod] on the left edge of the screen.

The operation screen of your iPhone with Lightning connector appears.


If you do not connect your iPhone with Lightning connector to your navigation system via Bluetooth, a confirmation message appears. Touch [Connect] on the message to connect your registered iPhone with Lightning connector via Bluetooth.

— If you touch [Settings] on the message, you can switch to the “Bluetooth Settings” screen to register your iPhone with Lightning connector.

— If you touch [Cancel] on the message, the confirmation message closes.

4. Touch .

The AppRadio app launches, and the “AppRadio Mode (Application menu)” screen appears.

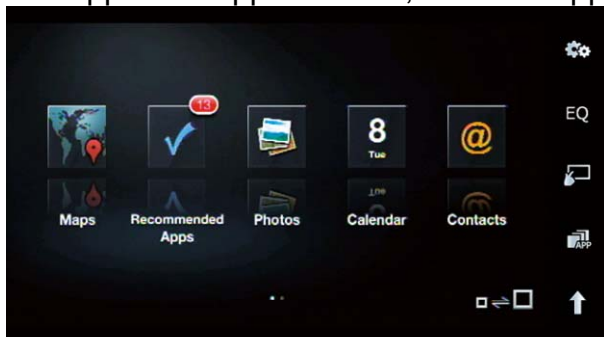

5. Touch the desired application icon.

The desired application launches, and the application operation screen appears.

6. Operate the application.

Streaming Pandora® and using Aha Radio (for iPhone with Lightning connector users)

The procedure for using this function is essentially the same as in steps 1 to 3 for *Using AppRadio Mode*. However, tap [Pandora] or [aha] on the left edge of the screen in step 3.

— Album artwork of the current track on the “Pandora®” screen is not displayed only when you use the VGA/USB interface cable for iPod / iPhone (CD-IV202NAVI, sold separately).

— An image of the current content on the “aha” screen is not displayed only when you use the VGA/USB interface cable for iPod / iPhone (CD-IV202NAVI, sold separately). Also, the icons of your available Aha Radio stations on the list are not displayed with this connecting method.

Notice regarding output setting of the rear display

When you using the VGA/USB interface cable for iPod / iPhone (CD-IV202NAVI, sold separately) and selecting the following settings, the video of the iPod and the sound of SD or USB are output to the rear display. This occurs if you select the SD or USB source on the front display of the navigation unit.

— “App Connection” is set to “iPhone”.

— “iPod Connection Settings” is set to “VGA”.

— Video and sound of iPod is set as the rear display output.

If you want to output the video and sound of the iPod on the rear display, select any source except the SD or USB source on the front display of the navigation unit.

Setting guidelines on the rear view image


CAUTION

- When adjusting the guidelines, be sure to park the vehicle in a safe place and apply the parking brake.
- Before getting out of the car to place the markings, be sure to turn the ignition switch off (ACC OFF).
- The range projected by the rear view camera is limited. Also, the vehicle width and distance guidelines displayed on the rear view camera image may differ from the actual vehicle width and distance. (The guidelines are straight lines.)
- The image quality may deteriorate depending on the usage environment, such as at night or in dark surroundings.


1. Park your vehicle in a safe place and apply the parking brake.

2. Using packing tape or similar, place markings approximately 25 cm (9-7/8 in.) from each

side of the vehicle, and approximately 50 cm (1 ft. 8 in.) and 2 m (6 ft. 7 in.) from the rear bumper.

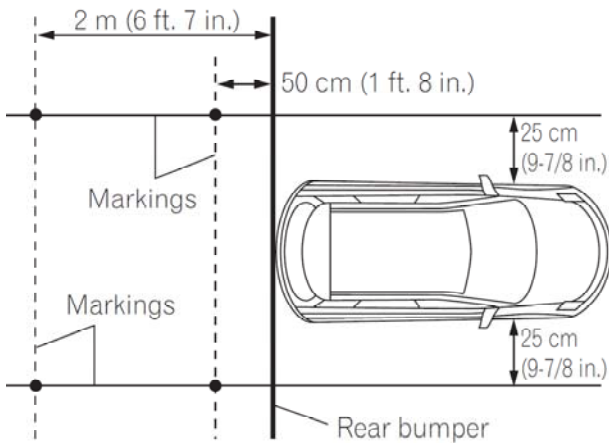


3. Put the shift lever in reverse and display the rear view camera screen.

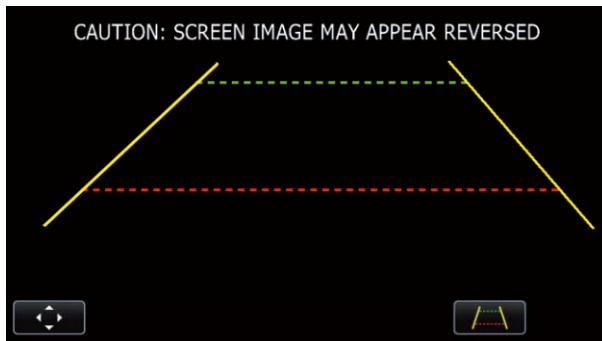

4. Touch .

The screen for setting the guidelines appears.

— Each touch of  turns the guidelines display on or off.


5. Touch  or .



The screen for adjusting the points appears.

— If you touch [Clear], the display position of the guidelines returns to the factory settings.

6. Touch  or  to select a point.

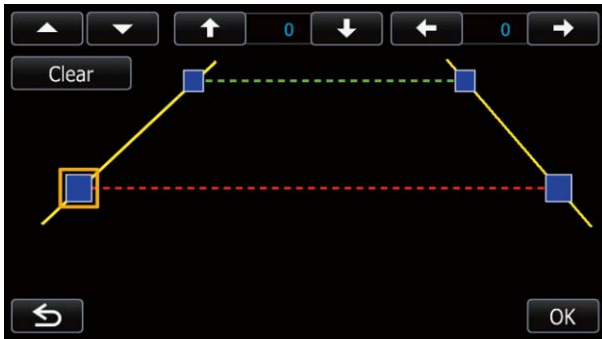


7. Touch , ,  or  to adjust the position of the point.

— When a point is moved, the distance from the initial value is displayed at the top right of the screen.

8. Touch [OK].

The set value is saved and the rear view image appears.

— If you touch [Clear], the point returns to the preadjustment position.

— If you touch , the display returns to the setting screen for guidelines without reflecting the setting.